


# ASSEMBLY GUIDE



## SETUP

1. Once you finished the assembly (see STEP 1 on the backside), download the 'Espressif Esptouch' app by Espressif Systems from the iOS App Store, or 'Esptouch' app by D-Parts Mobilphon from the Google Play store on your phone.

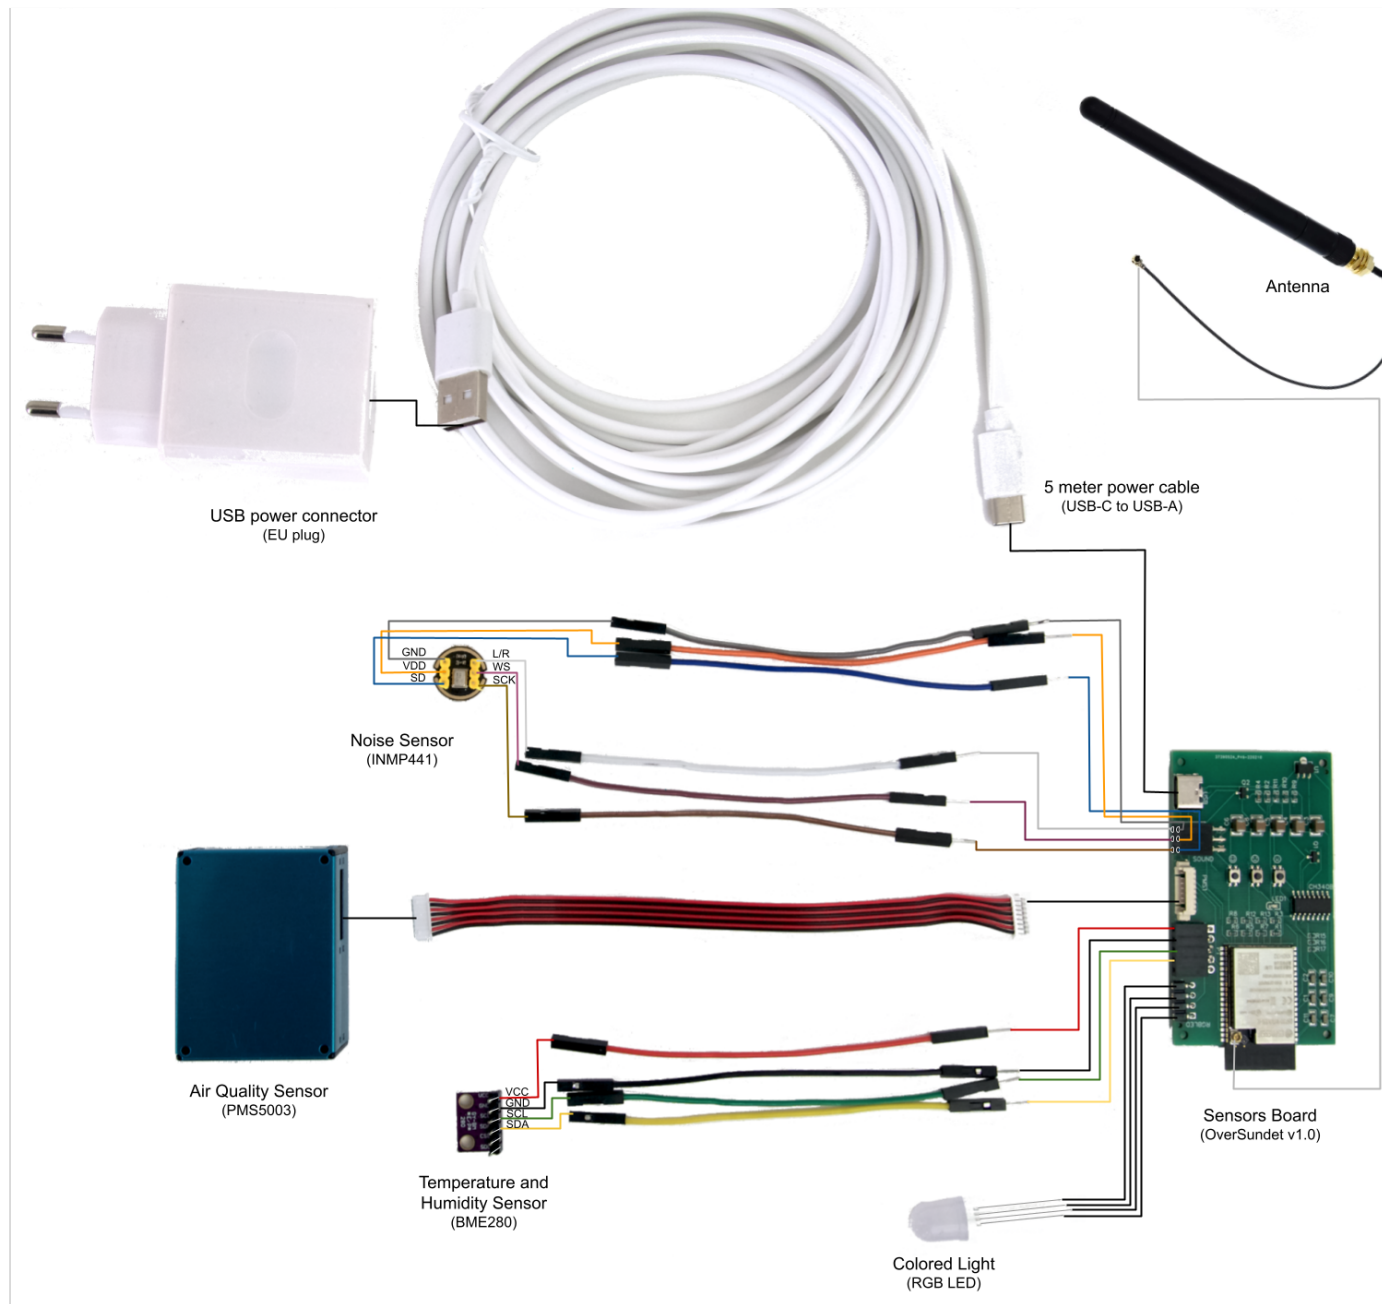

iOS



Android

2. Connect your phone to the same WiFi as the one you'd like the device to be connected to.

3. Plug in the device to a power supply.

4. Open the app, allow location sharing, and select 'EspTouch' from the menu in the app.

5. Type in the password for the WiFi network, then click Confirm.

6. Wait for blinking green lights on the LED connected to the board. Your device is then connected to the WiFi network and will start reading the sensors.

7. You are all set!

In case you need to change the WiFi network, power the device and keep the ☺ and ☹ buttons on the board pressed at the same time for 5 seconds.

This will put the board into a state where you can go through the WiFi setup process again.

## DASHBOARD

To view your data, go to [extendedsenses.com/data/your-device-id](https://extendedsenses.com/data/your-device-id)

You can find **your-device-id** by looking at label on the board. For example, if your device-id is elated-elephant, you'll see the incoming data at [extendedsenses.com/data/elated-elephant](https://extendedsenses.com/data/elated-elephant)

You should be seeing incoming data after a few minutes of plugging in the device.

## PLACEMENT OUTDOORS

The product is supposed to be placed outside.

Insert it into an enclosure protecting it from rain, and try to find a place in the shade.

Have a look at [extendedsenses.com](https://extendedsenses.com) for inspiration on how to create your own enclosure.

Use zip ties to attach the enclosure to a balcony rail or a water pipe, or use double-sided tape to attach it to a window frame.

## REGISTER HOW YOU ARE SENSING THE ENVIRONMENT

In addition to sensing the environment, you can add data on how you are feeling. You can add your mood at [extendedsenses.com/mood](https://extendedsenses.com/mood)



For help and inspiration visit [extendedsenses.com/support](https://extendedsenses.com/support).